


INSTALLING RUBRAILS

You should have six (6) separate pieces of milled hardwood in your rubrail package and one bag of 3/4-inch brass wire brads.

First, scarf three (3) rubrail sections together for each side of your boat. Once the epoxy has cured, trim the rubrails to length. Fasten them to the side of the hull at the sheerline with epoxy and the brads (the brads should be 4 inches apart). It is very important that the top of the rubrail lay flush with the top of the deck. If the rubrails are installed a bit high, you can plane or sand them to the level of the deck. If the rubrails are too low, you will need to plane the deck (avoid this at all costs!).

Sand or plain the ends of the rubrails into a rounded shape as shown in the sketch below.

*END THE RUBRAILS FLUSH AT THE BOW
& STERN AND ROUND OVER SMOOTHLY.*

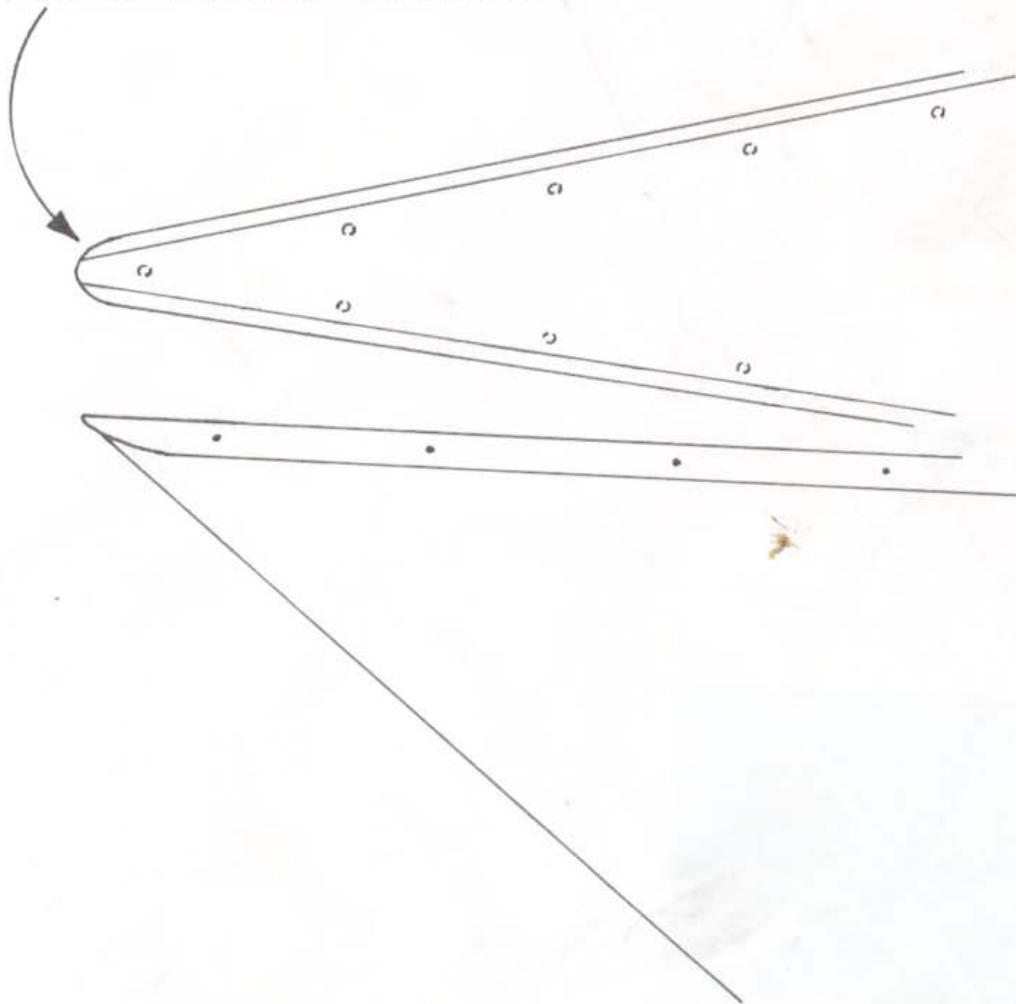

*Chesapeake Light Craft
1805 George Avenue
Annapolis, MD 21401
(410) 267-0137*